

# HOW TO UNPACK A MIXER AND PREPARE IT FOR DELIVERY / SALES

PERTAINS TO SIZE 80 L, 100 L OR 120 L

- 1) The smaller mixers are positioned horizontally in boxes and are secured by panels screwed onto a pallet.
- 2) Release and remove the screws and wrapping.
- 3) Release and remove the screws securing the mixer to the pallet — both sides.
- 4) Remove the rear-top part of the frame from where it's been positioned during transportation and put it aside for later.
- 5) Pull the mixer a bit out from the pallet.
- 6) Place each of the 300 mm wheels on the axle on the right and left hand side respectively and fasten them by using the bolt and washer from the small plastic bag also containing the manual.
- 7) Release the bolts and nuts from the two separate telescopic legs in front and the telescopic leg at the back of the mixer.
- 8) Adjust all the telescopic legs to the same appropriate working height by choosing,

Pos. # 1 for transportational purposes only (or very small persons).

Pos. # 2 for small persons.

Pos. # 3 for the standard — and generally recommended — position.

Pos. # 4 for tall persons.

Fasten the bolts and nuts for all telescopic legs concerned.

- 9) Lift the mixer to an upright position by putting one foot against the telescopic legs in the back and pulling the mixer upwards.



**SALES SUPPORT / ADMIN**  
FABRIKSPARKEN 13 DK-2600 GLOSTRUP  
+45 36 72 75 00 SALES@SOROTO.DK

**PRODUCTION / WAREHOUSE**  
FABRIKSPARKEN 11 DK-2600 GLOSTRUP  
+45 36 72 78 00 TEKNIK@SOROTO.DK

SOROTO@SOROTO.DK WWW.SOROTO.DK

- 10) Take the rear-top part of the frame previously set aside and insert it into the part of the frame on both sides of the mixer. Insert the special bolt and fasten it with the nut from the small plastic bag also containing the manual. Fasten on both sides.
- 11) Place the CE safety grid in front of the discharge chute and fasten it onto the mixer by tightening the bolts already attached to the CE safety grid.
- 12) Open and close the mixer gate a few times.
- 13) Remove the cable binders (3 pcs. in total) making sure that the mixer arms do not move during transportation; 1 pc. around the drive shaft to which the 2 pcs. around the cross joint are attached.
- 14) Open and close the grid funnel a few times.
- 15) Press the start the START button and test the mixer — does it run correctly and is the electricity cut off when the grid funnel is being opened? When the electricity has been cut off, close the grid funnel again and press the START button to check that the motor runs again.

